



First disassemble the factory-fit ECO air vent.

Attention:

Make sure that entry and exit are shut off beforehand and that the radiator is depressurised or partially emptied.



Mount the body of the permanent air vent ECO (S-Vent Duo) in the radiator, please use the S-Vent DUO mounting key (article number T2151) to fix the air vent, use in no case a pipe wrench or similar.

Remove any seal residue from the threaded connection of the radiator before mounting.



For a quick and thorough manual bleeding, open again entry and exit of the radiator and screw the venting hose (article number T2152) onto the air vent body mounted in the radiator.



**Attention :** When placing the venting hose on the air vent, please pay attention to the correct positioning of the cams of the valve opener, these are of different sizes and fit only in one position on the air vent.



During the bleeding process, we recommend draining the escaping air-water mixture into a suitable container.



**Attention :** After manual bleeding, remove the venting hose. Turn the cover onto the air vent body, the permanent venting of the radiator is now activated.